





PM-521

Quick Start Guide

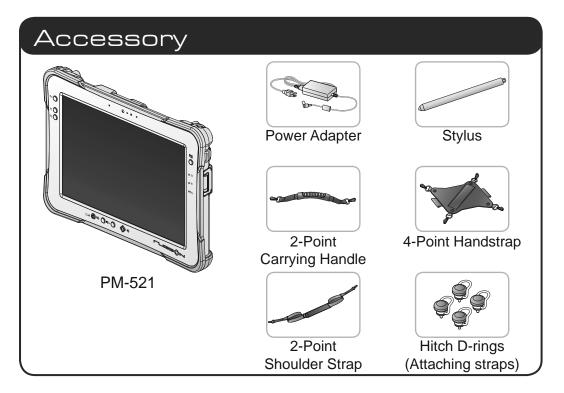



Overview

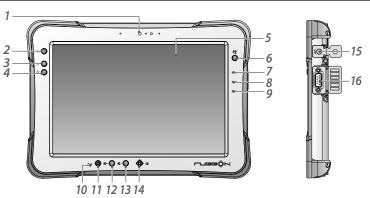


- Front camera
- 2 FN key
- 3 F1 key
- 4 F2 key
- 5 Touch screen
- 6 Barcode trigger
- 8 Wi-Fi LED 9 FN LED
- 10 Power LED

7 Battery LED

11 Power key 12 Volume -

- 13 Volume +
- 14 Home key 15 DC-IN jack
- 16 RS-232

Note: To prevent damage or malfunction, always dry the touch screen when wet.

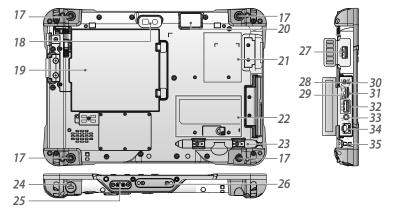


- 17 Securing holes
- 18 Rear camera
- 19 Battery
- 20 Barcode reader
- 21 NFC sensing area
- 22 Expansion bay
- 23 Stylus holder

- 24 Kensington lock
- 25 Pass-through
- 26 Docking connector
- 27 USB 2.0
- 28 Micro HDMI
- 29 MicroSD slot
- 30 Battery switch


- 31 Micro SIM slot
- 32 USB 3.0
- 33 Audio jack
- 34 Ethernet
- 35 Tether hole

MicroSD Card

- 1. Unlock the latch.
- 2. Open the I/O compartment cover.

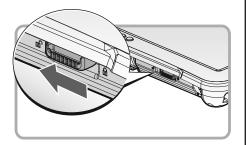


- **3.** Take the microSD card from its packaging.
- **4.** Insert the microSD card into the slot, making sure the beveled edge is aligned in the slot.
- **5.** Press in until an audible click sounds.

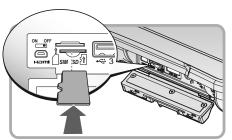


Charging

- **1.** Flip open the DC-IN cover to expose the DC-IN jack.
- **2.** Connect the AC adapter to the DC-IN port.

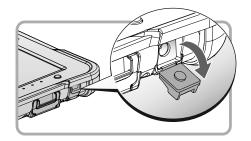


- **3.** After charging, disconnect the AC adapter.
- **4.** Replace the DC-IN cover by angling the rear side at an angle.
- **5.** Press the front open end down in the compartment to seal in place.

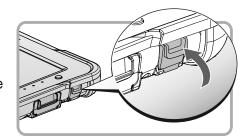


SIM Card

- 1. Unlock the latch.
- 2. Open the I/O compartment cover.

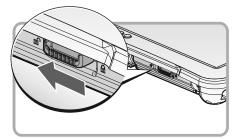



- **3.** Take the SIM card from its packaging.
- **4.** Insert the SIM card into the slot, making sure the beveled edge is aligned in the slot.
- 5. Press in until an audible click sounds.

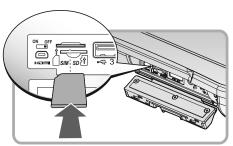


Power On

 - 1. Open the I/O compartment cover.
- **2.** Switch the DIP switch to the ON position.
- **3.** Install the external battery cover over the battery connector.



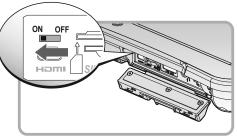

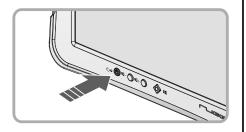

Visit www.ruggon.com to download the latest user manual and installation information.